

Chevrolet Silverado / Colorado Tailgate Letter Inserts

Installation Time: 18 minutes

Tools Required:

1. Isopropyl Alcohol
2. Lint Free Scratch Resistant Cloth

Preparing Surface:

1. Thoroughly clean all the installation surfaces.
2. Apply isopropyl alcohol mixture to a clean lint free cloth and clean the emblem surface to be installed. Allow the surface to air dry thoroughly.



Note: Always use a clean, lint-free scratch resistant cloth.

Note: Never apply isopropyl alcohol directly to the surface!

Inserts and vehicle installation surfaces must be between 70° F and 110° F at time of installation

Note: A heat source may be used to reach minimum temperature if nec

Verify Kit Contents:

Inspect the kit for contents and damage.

Product Installation:

Ensure a surface preparation has been completed before starting installation process

1. Check fitment of the insert within the cavity prior to installation



2. Remove the liner from the back of the letter, exposing the adhesive backer



Note: Do not touch the adhesive liner during installation.


3. Align the top edge of the insert and slightly attach the letter (do not fully adhere to the vehicle at this time)



Note: Do not touch the adhesive liner during installation.

Check the alignment of the letter and make any alignment adjustments before pressing the remainder of the letter into place.

4. Press the remainder of the letter into place

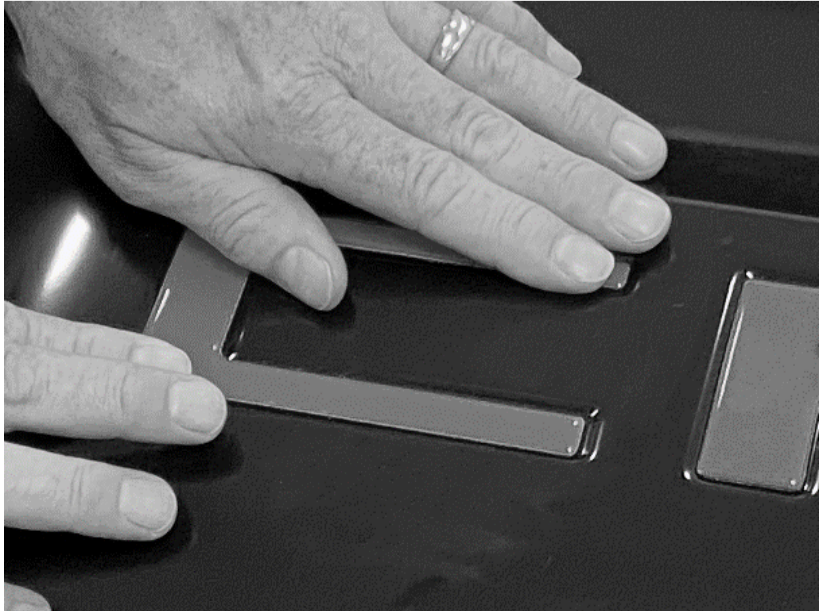

Using a soft felt block, press firmly on the letter from the top edge, working downward to the bottom of the letter to ensure maximum adhesion contact.

Repeat steps 1-4 for remaining letters.